




TITLE: Cat.8 RJ45 STP Field Module Plug
P/N: CL-IPF-C8

Instruction Manual


① Remove the Cable tie before installation.

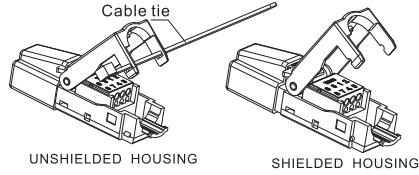

UNSHIELDED HOUSING

SHIELDED HOUSING


② Insert cable into strain relief boot, strip off 1.2 inch of cable jacket, fold back braid and drain wire.

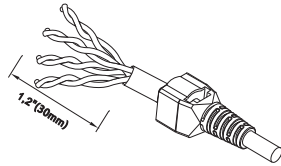


1.2"(30mm)

Boot adjustment

Cut the end of boot to fit your cable OD.




③ Fan out all four twisted pairs, following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.

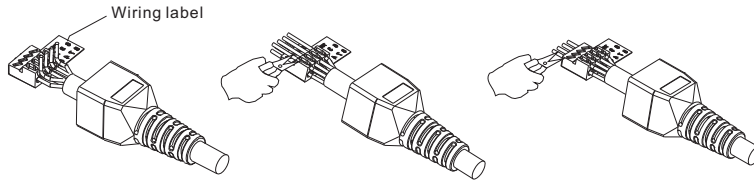


Wiring label


④ Place wiring cap on plug.

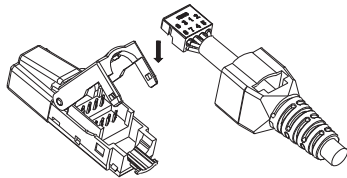

⑤ Place the wiring cap onto plug, use plier to clamp wiring cap until it completely snap-in to effect the connection.

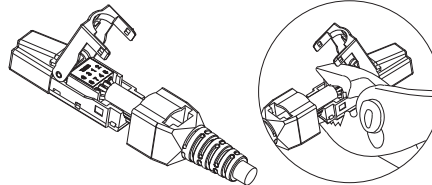

⑥ Close plug cover, make sure the drain wire is in proper contact with grounding clip on plug. Pull back strain relief boot to cover the plug, fasten supplied cable tie to secure grounding contact.

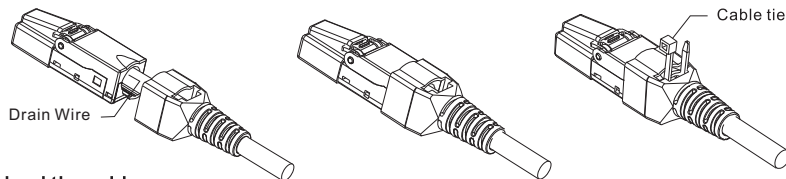


Drain Wire

Cable tie

Unload the cable

Cut off cable tie, remove the boot. Using flat screw driver and pry gently on plug cover one end first and the other end subsequently to open it.

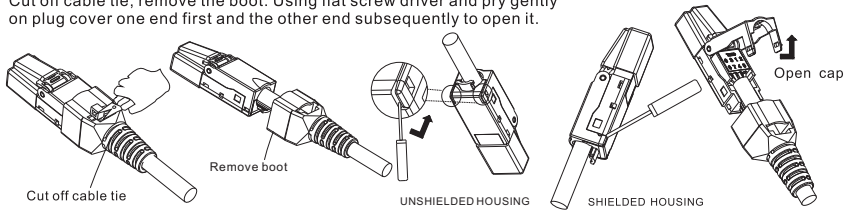

Cut off cable tie

Remove boot

UNSHIELDED HOUSING


SHIELDED HOUSING

Open cap

JACK PIN DESIGNATIONS	TIA/EIA T568A	TIA/EIA T568B
	1	White/Green
2	Green	Orange
3	white/Orange	White/Green
4	Blue	Blue
5	white/Blue	white/Blue
6	Orange	Green
7	White/Brown	White/Brown
8	Brown	Brown

Montageanweisung

① Vor der Montage Transportsicherung entfernen

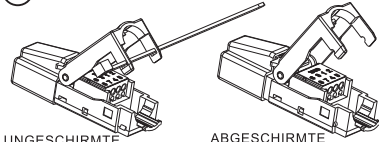


UNGESCHIRMTE
WOHNUNGEN

ABGESCHIRMTE
WOHNUNGEN


PIN Belegung	TIA/EIA T568A	TIA/EIA T568B
	1	Weiß/Grün
2	Grün	Orange
3	Weiß/Orange	Weiß/Grün
4	Blau	Blau
5	Weiß/Blau	Weiß/Blau
6	Orange	Grün
7	Weiß/Braun	Weiß/Braun
8	Braun	Braun

② Kabel in Knickschutztülle einführen. Kabelmantel ca. 30mm absetzen, Schimflecht und Beidraht sorgfältig zurückbiegen.

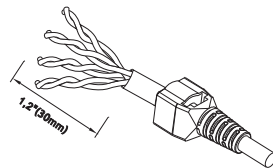


Knickschutztülle anpassen


Knickschutztülle auf korrekten Kabeldurchmesser kürzen.




③ Kabeladern aufdrehen und entsprechend Farbcode im Kabelmanager positionieren. Kabelenden kürzen.

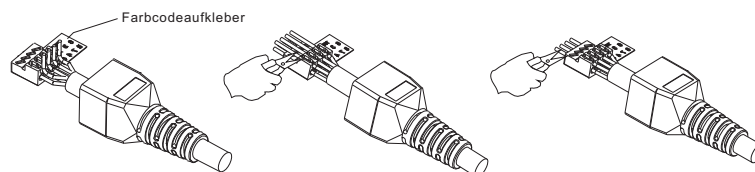


④ Farbcodeaufkleber entfernen.

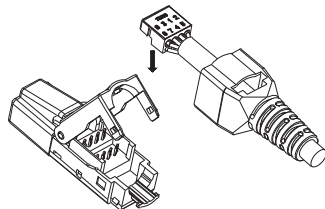

⑤ Konfektionierten Kabelmanager auf Stecker positionieren und mit einer Zange fixieren bis dieser einrastet und eine sichere Verbindung gewährleistet.

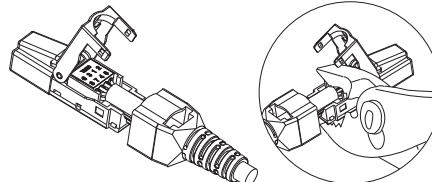

⑥ Steckerabdeckung schließen und sicherstellen, dass der Beidraht einen guten Kontakt zum Gehäuse hat. Knickschutztülle über den Stecker schieben und mit Kabelbinder fixieren.

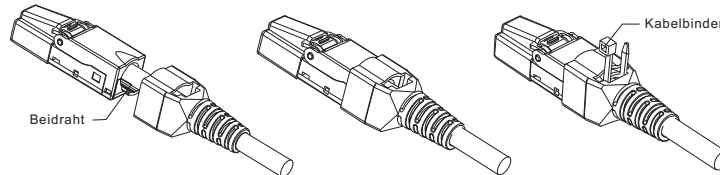

Demontage des Steckers

Kabelbinder entfernen und Knickschutztülle zurück schieben. Mit einem flachen Schraubendreher die beiden Enden nacheinander aufhebeln und die Steckerabdeckung öffnen.

